


Dish Towel  
Finished Size: 20" x 28"




Placemats (Set of 4)  
Finished Size: 20" x 15"



Pot Holder  
Finished Size: 9¾" x 9¾"



Dish Towel

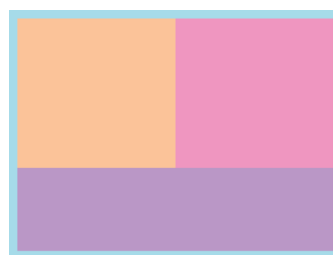

Placemats



Pot Holder

FABRIC REQUIREMENTS					
		DISH TOWEL	PLACEMATS (SET OF 4)*	POT HOLDER	TOTAL YARDAGE FOR ALL PROJECTS
	FABRIC A 31242 X	¼ YARD	½ YARD	½ YARD	1¼ YARDS
	FABRIC B 31243 B		⅝ YARD	½ YARD	1⅞ YARDS
	FABRIC C 31243 H		⅝ YARD	½ YARD	1⅞ YARDS
	FABRIC D 31243 N		1 YARD FOR BACKING	½ YARD	1½ YARDS
	FABRIC E 31244 B		¾ YARD (FOR BINDING)	½ YARD	1½ YARDS
	FABRIC F 31244 O			½ YARD	½ YARD
ADDITIONAL MATERIALS:		<ul style="list-style-type: none"> <li>Thread to match fabric</li> <li>¼ yard fusible web</li> <li>Dunroven 100% cotton dish towel</li> <li>4 (16" x 21") rectangles fusible fleece or batting</li> <li>1 square Insul-Bright™ thermal batting to match size of squares</li> <li>6" length of cording (optional)</li> <li>1 10" block panel may be substituted for the squares cut for these projects.</li> </ul>			

\*Placemat Fabric B 10½" squares may also be cut from 10" block panel

*We recommend that you carefully read through all instructions before getting started on your project.*

## DESIGNER DISH TOWEL

### CUTTING DIRECTIONS

**WOF = Width of fabric from selvage to selvage**

#### Fabric A

- Cut 1 (3½" by WOF) strip

### COMPLETING THE DISH TOWEL

1. Fold the dish towel in half along the length to find the center. Place a pin to mark the center of each end. (Diagram 1)
2. Apply fusible web to the wrong side of the previously cut **Fabric A** strip.
3. Cut the fused strip in half to make 2 (3½") strips. Trim 1 strip to 2" by the length.
4. Mark the center of each strip as in step 1.
5. Center and pin the wider strip right side up on 1 end of the right side of the dish towel approximately 3" up from the bottom edge; fuse in place. Trim the ends of the strip 1" longer than the tea towel on each end. (Diagram 2)



Diagram 1

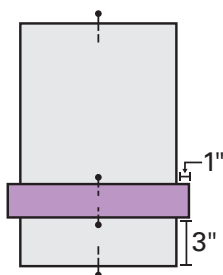


Diagram 2

6. Using thread to match **Fabric A** and a machine blanket stitch, sew along the long raw edges of the fused strip. (Diagram 3)

7. Turn under 1 raw end of the overhanging edge of the strip ¼"; stitch to hem. Turn the hemmed end to the back side of the tea

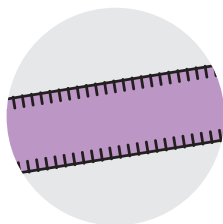


Diagram 3

towel and hand- or machine-stitch in place. Repeat on the opposite end with the 2"-wide strip.

8. Repeat steps 5–7 with the narrow strip on the opposite end of the right side of the tea towel to finish.

## STITCH & FLIP POT HOLDER

### CUTTING DIRECTIONS

**WOF = Width of fabric from selvage to selvage**

#### Fabric A

- Cut (1) 10½" x WOF
- Cut (1) 10½" x 10½" square

#### Fabric B

- Cut (1) 10½" x WOF
- Cut (1) 10½" x 10½" square

#### Fabric C

- Cut (1) 10½" x WOF
- Cut (1) 10½" x 10½" square

#### Fabric D

- Cut (1) 10½" x WOF
- Cut (1) 10½" x 10½" square

#### Fabric E

- Cut (1) 10½" x WOF
- Cut (1) 10½" x 10½" square
- Cut (1) 2" x 6" strip

#### Fabric F

- Cut (1) 10½" x WOF
- Cut (1) 10½" x 10½" square

#### Insul-Bright

- Cut (1) 10½" x 10½" square

#### Fabric F

- Cut (1) 10½" x WOF
- Cut (1) 10½" x 10½" square

### COMPLETING THE POT HOLDER

1. Select 1 of the coordinating squares. Place and pin the square right side up on the thermal batting square.
2. Machine-baste through the layers of the squares to hold.

**3.** Place the basted unit on a flat surface, with fabric facing right side up.

**4.** Fold each long edge of the 2" x 6" **Fabric E** strip to the wrong side; press. Fold the strip in half along the length with right side out; press. Stitch along the open edge to hem and fold in half to complete the hanging loop. Place the raw ends of the hanging loop at 1 corner of the basted unit with the loop toward the center. Machine-baste in place inside the seam allowance, (Diagram 4) Note: You may use cording to make the hanging loop.

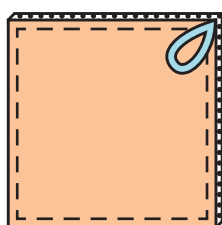


Diagram 4

**5.** Fold and press each of the remaining fabric squares in half on 1 diagonal with wrong sides together to make triangles.

**6.** Place 1 folded triangle on the basted unit matching 1 corner and edges; pin and machine-baste to hold. (Diagram 5)

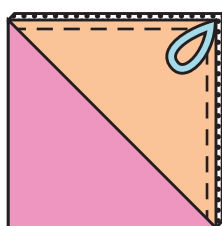


Diagram 5

**7.** Repeat step 6 with a second folded triangle in a clockwise direction, covering 1 end of the previously stitched triangle. (Diagram 6)

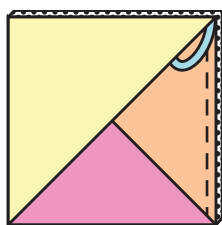


Diagram 6

**8.** Repeat step 6 with the remaining 2 triangles to cover all corners, tucking the final triangle under the first triangle placed, removing basting as needed.

**9.** Place the remaining fabric square right sides together with the stitched unit. Using a  $\frac{3}{8}$ " seam allowance, stitch all around the outer edges, leaving a 6" opening on 1 side. Trim corners to reduce bulk. (Diagram 7)

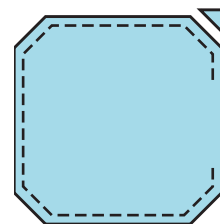


Diagram 7

**10.** Turn the stitched unit right side out, poking out corner seams with a blunt object. Press edges flat. Topstitch close to the edge all around, tucking opening edges to the inside as you stitch, to finish.

## QUILT-AS-YOU-GO PLACE MATS SET OF 4

### CUTTING DIRECTIONS

**WOF = Width of fabric from selvage to selvage**

#### Fabric A

- Cut (2) 5" x WOF strips. Recut into (4) 5" x 20½" rectangles.

#### Fabric B

- Cut (1) 10½" x WOF strip. Recut into (4) 10½" squares.
- If using 10" block panel, cut (4) 10½" squares, centering block motif

#### Fabric C

- Cut (1) 10½" x WOF strip. Recut into (4) 10½" squares.

#### Fabric D

- Cut (2) 15½" x WOF strips. Recut strips into (4) 15½" x 20½" backing rectangles

#### Fabric E

- Cut (9) 2½" x WOF strips for binding.

#### Batting

- Cut (4) 16" x 21" rectangles.

## COMPLETING THE PLACE MATS

1. Center and fuse a batting rectangle to the wrong side of (1) 15½" x 20½" backing rectangle.
2. Place the fused unit batting side up on a flat surface.
3. Place and pin a **Fabric B** square right side up on the fused unit matching upper right corners. (Diagram 8).

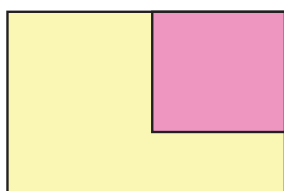


Diagram 8

4. Place a **Fabric C** square right sides together with the **Fabric B** square, matching edges. Stitch along the inside edge of the layered squares using a ¼" seam allowance. Flip the **Fabric C** square to the right side and press. (Diagram 9)

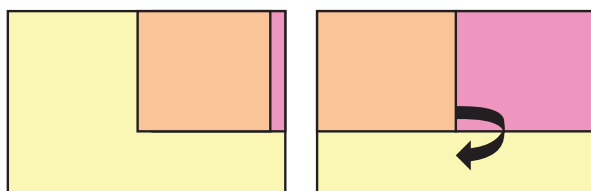


Diagram 9

5. Center the **Fabric A** strip right sides together on the stitched unit, matching raw edges of the **Fabric B/C** squares with the edge of the **Fabric A** strip. Stitch along the long edge using a ¼" seam allowance. Press the **Fabric A** strip to the right side. (Diagram 10)

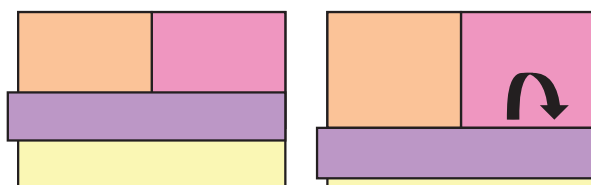


Diagram 10

6. Machine-stitch in the ditch of all seams to secure the layers.
7. Machine-quilt as desired. Trim edges even, if necessary.
8. Repeat all steps to make 4 place mats.
9. Join all binding strips on the short ends to make 1 long strip. Press the strip in half with wrong sides together.
10. Sew the binding strip to the outer edges of each place mat using your favorite method to complete the set.